

Customer educational Tips:

Front Seat Audio Controls



(1) VOLUME

Used to control volume.

(2) SEEK

When pressed shortly (under 0.8 seconds):

- FM, AM, XM mode : searches broadcast frequencies saved to presets.
- CD, USB, iPod, My Music, Bluetooth Audio mode : changes the track or file.

When pressed and held (over 0.8 seconds):

- FM, AM, XM mode : automatically searches broadcast frequencies and channels.
- CD, USB, iPod, My Music mode : rewinds or fast forwards the track or file.